














Feature

- Standard DMX512 compliant control interface, enable to set the DMX address freely. And show address Via digital numueric display.
- Four-channel output selectable.
- Two types available(Constant Voltage, Constant Current), suitable for different LED lamps.
- To work with power repeater to expand output power unlimitedly.


Parameter

Part No.	INPUT	CURRENT	OUTPUT	REMARKS
DMX-DM-4C5A-DCF	12-36VDC	4x5A	4x(60-180)W	constant voltage
DMX-DM-4C8A-DCF	12-36VDC	4x8A	4x(96-288)W	constant voltage
DMX-DM-35mA-DCF	12-36VDC	4x0.35A	4x(4.2-12.6)W	constant current
DMX-DM-0.7mA-DCF	12-36VDC	4x0.7A	4x(8.4-25.2)W	constant current

Product Size

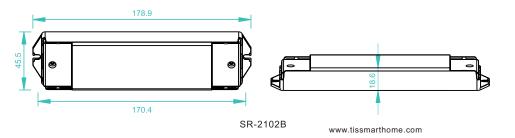

Wiring diagram

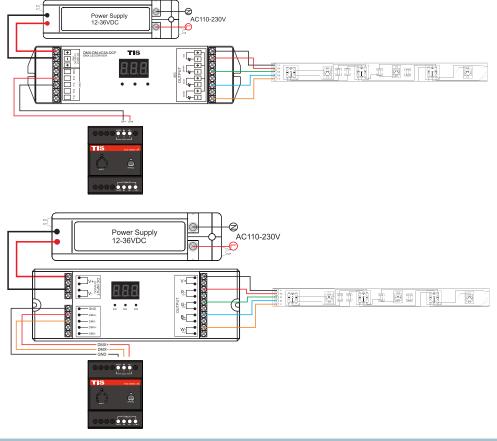

Using instruction

Through buttons to set desired DMX512 address, 1 key is to set "hundreds" position, 2 is to set "ten" position, 3 is to set "a" bit.



To open the connection of DMX512 controller, then it can work correctly.



Choose Channel

Press 2nd button and 3rd button at the same time for 2 seconds, cH digital display flashes, then press 1st button to choose 1/2/3/4, 3 means total 3 channels, 4 means total 4 channels. Press any button for >2 seconds to confirm the 1,2,3 or 4 channels. The factory preset default is 4 channels outputs.

NOTE:

For example, when we set address to 001

When select 1cH, all four channels will be the same address 001.

When select 2cH, channel one and channel three will be the same address 001, channel two and channel

When select 3cH, channel 1,2,3 will be address 001,002,003, and channel 4 address is also 001 When select 4cH, channel 1, 2, 3,4 will be address 001, 002,003,004.

Set DMX address

Press 1st button for 2 seconds, digital display flashes to set the required DMX address, then press any button for >2 seconds to confirm.





Choose PWM frequency

Press 1st button and 3rd button for 2 seconds, digital display flashes to show P-c.

P means PWM frequency, press 1st to show "1", means 1500Hz, "2" means 200Hz.

c means dimming options, press 3rd to show "1", means logarithmic dimming, "2" means linear dimming.

The factory preset default is PWM frequency 200Hz with linear dimming, 2-2

Safety & Warnings

- 1) The product shall be installed and serviced by a qualified person.
- 2) IP20.Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- 3) Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6) Please ensure that the cable is secured tightly in the connector
- 7) For update information please consult your supplier.

Warranty Agreement

- 1) We provide lifelong technical assistance with this product:
- 2-year warranty. We print date on every products,
- For faults beyond the 3-year warranty we reserve the right to charge for time and parts.
- 2) Limited Warrenty
- Any defects caused by wrong operation.
- Any damages caused by unauthorized removal, maintenance, modifying, incorrect connection and replacement of chips.
- Any damages due to transportation, vibration etc. after purchase.
- Any damages caused by earthquake, fire, lightning, pollution and abnormal voltage.
- Any damages caused by negligence, inappropriate storing at high temperatures and humidity or near harmful chemicals.
- Product has been updated
- 3) Repair or replacement as provided under this warranty is the exclusive remedy to the customer.